



motorola



User's Guide

Portable Digital Audio Monitor with Baby Care Timer

Models: MBP169, MBP169-2

The features described in this user's guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Digital Audio Baby Monitor!

Thank you for purchasing the Digital Audio Baby Monitor. Now you can hear your baby sleeping in another room. The Digital Audio Baby Monitor also comes with a baby care timer that can help you remember important baby-care tasks or maintain your baby's feeding, diaper change and napping schedule when he or she is with other caregivers.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product-related questions, please call:

+491805 938 802 in Europe
Email: support@motorolastore.com

This User's Guide provides you with all the information you need to get the most from your product.

 
Before you use the Digital Audio Baby Monitor, we recommend that you insert and fully charge the battery in the parent unit, so that it continues to work if you disconnect it from the mains power to carry it to another location. Please read the Safety Instructions on page 7 before you install the units.

Got everything?

- 1 x Parent Unit with desktop stand
- 1 x Baby Unit
- 1 x Rechargeable Ni-MH battery pack for the Parent Unit
- 1 x Battery door for Parent Unit
- 1 x Charging Pad (Baby Unit)
- 2 x Power adapters (Baby Unit and Parent Unit/Charging Pad)

In packs with dual parent units, you will find an additional parent unit with power adapter and rechargeable NiMH battery pack.

Overview of the Parent Unit

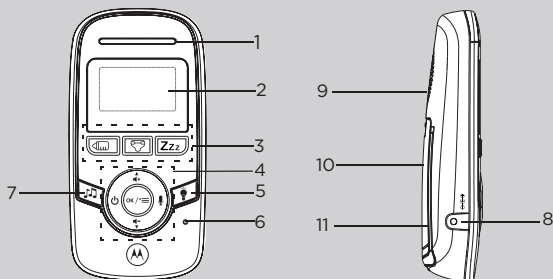

1. Sound Level Indicator

2. LCD Display

3. Timer Buttons

4. Control Key Panel

UP / VOLUME+ ▲

Press to increase speaker volume. While in a menu, press to scroll up.

DOWN / VOLUME - ▼

Press to decrease speaker volume. While in a menu, press to scroll down.

POWER ON/OFF ⏻

Press and hold to power on or off.

Press to turn the screen on or off.

MENU/SELECT OK / * ≡

Press to enter the menu.

While in a menu, press to choose an option, or save a setting.

TALK 🗣️

Press and hold to talk to the baby unit.

5. Night Light 💡

Press to turn night light on or off.

6. Microphone

7. Lullaby 🎵

Press to start or stop lullaby playback.

In timer setting: Press to reset timer to 00-00.














8. Power Jack

9. Speaker


10. Battery compartment cover

11. Desktop Stand

Parent Unit display icons

	<p>Connection status</p> <ul style="list-style-type: none">- Displays when the parent unit is linked to the baby unit.- Flashes when the link between the baby unit and the parent unit is lost or the parent unit is out of range of the baby unit.
	<p>Battery status</p> <ul style="list-style-type: none">-     scrolls when battery is charging.-  displays when battery is fully charged.-  displays when battery is low and needs charging.-  displays when battery is empty and needs charging.
	<p>Sound alert</p> <ul style="list-style-type: none">- Displays when sound alert is ON.- Flashes when sound alert is triggered.
	<p>Volume off</p> <ul style="list-style-type: none">- Displays when speaker volume is turned off.
	<p>Night light</p> <ul style="list-style-type: none">- Displays when night light is ON.
	<p>Lullaby</p> <ul style="list-style-type: none">- Displays when lullaby is playing.

 Overview of the Baby Unit

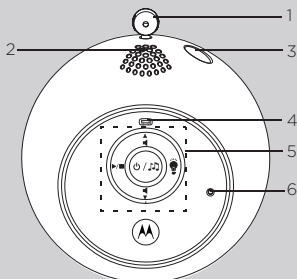

1. Temperature Sensor

2. Speaker

3. Power Jack

4. Power/Link indicator

On steadily when the baby unit is powered on and linked to the parent unit.

Off when the baby unit is powered off.

Flashes when the baby unit is out of range of the parent unit.

5. Control Key Panel

UP / VOLUME+

Press to increase speaker volume.

DOWN / VOLUME -

Press to decrease speaker volume.

POWER/ LULLABY /

Press and hold to power the baby unit on or off.

In idle mode: Press to enter lullaby menu.

In lullaby menu: Press to play or select lullaby.

PLAY/STOP /

Press to start or stop lullaby playback.

NIGHT LIGHT

Press to turn night light on or off.

6. Microphone

Important guidelines for installing your Digital Audio Baby Monitor

- To use your baby unit and parent unit together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, a metallic door or reinforced concrete, between the baby unit and parent unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- If the signal is poor, try moving the parent unit and/or the baby unit to different positions in the rooms.


Table of contents

1. Safety Instructions	7
2. Getting Started	10
2.1 Baby unit power supply.....	10
2.2 Parent unit battery installation and power supply.....	11
2.3 Desktop stand on parent unit.....	12
2.4 Powered by portable battery on baby unit.....	12
3. Using Your Digital Audio Baby Monitor	13
3.1 Power on or off	13
3.2 Speaker volume.....	13
3.3 Night light.....	14
3.4 Timers	14
3.5 Lullaby	18
3.6 Select display language for the parent unit.....	18
3.7 Turn sound alert on or off.....	18
3.8 Talk to the baby unit	19
3.9 Reset settings to default	19
4. Disposal of the Device (environment)	20
5. Cleaning	21
6. Troubleshooting	22
7. General Information	24
8. Technical Specifications	28

1. Safety Instructions

WARNING:

 Strangulation Hazard. Children have **STRANGLED** in cords. Keep this cord out of the reach of children (more than 1 metre away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

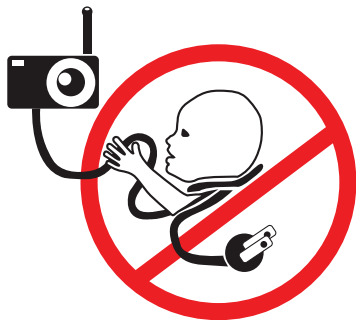

BABY MONITOR SET UP & USE:

- Choose a location for the Digital Audio Baby Monitor that will provide the best audio reception of your baby in his/her cot.
- Place the Baby Unit on a flat surface, such as a dresser, bureau or shelf, or mount the Unit on a wall securely using the keyhole slots under the stand.
- NEVER place the Baby Unit or cords within the cot.

WARNING

This Digital Audio Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Digital Audio Baby Monitor is not a substitute for responsible adult supervision.
- Keep this user's guide for future reference.
- Keep the cords out of reach of children.
- Do not cover the Digital Audio Baby Monitor with a towel or blanket.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Digital Audio Baby Monitor in damp areas or close to water.
- Do not install the Digital Audio Baby Monitor in extreme cold or heat, direct sunlight, or close to a heat source.

- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert a battery pack of the same type.
- Do not touch the plug contacts with sharp or metal objects.
- Connect the power adapters to easily accessible mains power.

 
CAUTION

There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Use only rechargeable battery pack with rating: 2.4V 400mAh

2. Getting Started

2.1 Baby unit power supply

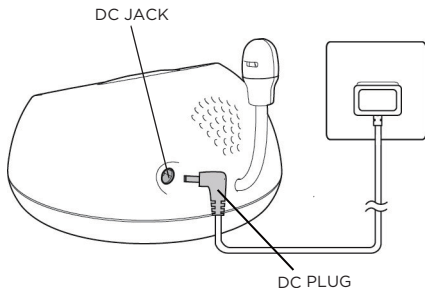


1. Insert the DC plug of the power adapter with the bigger DC plug into the DC jack on the back of the baby unit.
2. Connect the other end of the power adapter to a suitable mains power.

NOTE

Only use the provided power adapter.

2.2 Parent unit battery installation and power supply

 A rechargeable battery pack is supplied and should be fitted, so that the parent unit can be carried to another location without losing the link with the baby unit(s). Charge the parent unit before using it for the first time or when the parent unit indicates that battery is low. We recommend that the unit be charged for 15 hours prior to first use.

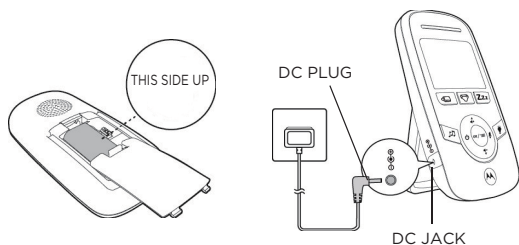


1. Slide off the battery compartment cover.
2. Insert the plug of the rechargeable battery pack into the jack inside the battery compartment.
3. Fit the battery pack into the compartment, with the label THIS SIDE UP facing up.
4. Slide the battery compartment cover back until it clicks into place.
5. Insert the DC plug of the power adapter with the smaller DC plug into the DC jack on the side of the parent unit.
6. Connect the other end of the power adapter to a suitable mains power.
7. The charging indicator comes on.

NOTE

Only use the provided power adapter and battery pack. We recommend that you install and fully charge the battery in the parent unit, so that it continues to work if you disconnect it from the mains power to carry it to another location.

 2.3 Desktop stand on parent unit

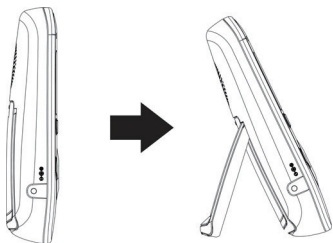


The parent unit comes with a desktop stand attached to the back of the unit. To place the parent unit on a desk, simply pull out the stand as shown above.

NOTE

Place the parent unit on a flat, even surface.

 2.4 Powered by portable battery on baby unit

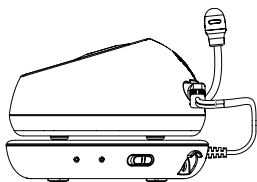

The Portable battery is assembled with a built-in rechargeable battery pack (Ni-MH battery 3.6V, 600mAh) to give up to 4 hours monitor operation without power connection, please charge the unit at least 16 hours for the first time use.

1. Insert the power plug of portable battery pack into the DC jack on the back of baby unit as shown.
2. Switch the POWER button to the ON position to turn the Battery Pack on, the ON/OFF indicator lights in green and the Baby Unit is powered on.
3. The Battery Level indicator lights in red when battery is low, connect power supply and keep for full charging.

NOTE



The battery is not a user-accessible item. Please contact the helpline if you think it needs replacing.

3. Using Your Digital Audio Baby Monitor



Please read these instructions carefully, and be aware that this Digital Audio Baby Monitor is only intended as an aid. It is not a substitute for responsible and proper adult supervision.

3.1 Power on or off

3.1.1 Power on or off the baby unit

- Press and hold  to power on the baby unit. The Power/Link indicator turns on.
- Press and hold  again to power off the baby unit. The Power/Link indicator turns off.

3.1.2 Power on or off the parent unit

- Press and hold  to power on the parent unit. The LCD screen turns on.
- Press and hold  again to power off the parent unit. The LCD screen turns off.

NOTE

If you place the parent and baby units too close together, you may hear a high pitched noise. This is not a fault. The units are designed to be operated at some distance apart, e.g. in separate rooms, so move the units further apart.

If the Power/Link indicator flashes on the baby unit or parent unit, they are not linked to each other. Make sure that both units are powered on, and reduce the distance between the units, but not closer than 1 metre.

3.2 Speaker volume




3.2.1 Adjust speaker volume of the baby unit

You can adjust the speaker volume of the baby unit from **Volume 1** to **Volume 5**.

- Press  or  on the baby unit.

3.2.2 Adjust speaker volume of the parent unit



You can adjust the speaker volume of the parent unit from **Volume 1** to **Volume 3**, or turn it off.

- Press  or  on the parent unit when it is not in use.
The sound level indicator lights up when you adjust the speaker volume. The number of LED lights indicate how loud the volume has been raised. When the speaker volume is set to off, the screen displays .



3.3 Night light

Turn on night light so that the room is gently lit and isn't so dark at night. The soft glow can allay a child's fears and help them or you avoid obstacles when up and around the room at night.

3.3.1 Turn on or turn off night light on the baby unit

1. When night light is off, press  to turn it on.
The bottom part of the baby unit lights up.
2. When night light is on, press  to turn it off.









3.3.2 Turn on or turn off night light on the parent unit

1. When the night light is off, press  to turn it on.
The LCD screen lights up.
2. When the night light is on, press  to turn it off.



 



3.4 Timers

You can set timers on the parent unit to remind you or caregivers of the time to feed the baby, change baby's diaper or put the baby to bed. If the time limit is reached, the corresponding timer button will flash and the parent unit will emit an alarm for 30 seconds. Press any key on the parent unit to stop the alarm and reset the timer to **00-00**.

3.4.1 Set feeding timer

1. Press  on the parent unit.
2. Press  or  to adjust the timer.
Each key press represents an interval of 30 minutes, up to an interval of 24 hours.
If the next feeding time is 4 hours later, press  or  to adjust the timer until **04-00** is displayed.
3. Press  or  to save and start the timer.
The screen will display **SAVED** before returning to idle screen.
The  feeding timer button remains lighted when the timer is running.


3.4.2 Reset feeding timer

1. Press  on the parent unit.
The timer will display on the screen.
2. Press  to reset the timer to **00-00**, then press  or  to adjust the timer.
Each key press represents an interval of 30 minutes, up to an interval of 24 hours.
3. Press  or  to save and start the adjusted timer.
The screen will display **SAVED** before returning to idle screen.
The  feeding timer button remains lighted when the timer is running.









NOTE

If no key is pressed within 10 seconds after adjusting the timer in step 2, the adjusted timer will be stored automatically, but the timer will not start.








To start the timer, press  and then press  or .

*When the time limit is reached, the  feeding timer button will flash and the parent unit will emit an alarm for 30 seconds. Press any key on the parent unit to stop the alarm and reset the timer to **00-00**.*

3.4.3 Set diaper change timer

1. Press  on the parent unit.
2. Press  or  to adjust the timer.
Each key press represents an interval of 30 minutes, up to an interval of 24 hours.
If the next diaper change time is 3 hours later, press  or  to adjust the timer until **03-00** is displayed.
3. Press  or  to save the timer.
The screen will display **SAVED** before returning to idle screen.
The  diaper change timer button remains lighted when the timer is running.


3.4.4 Reset diaper change timer

1. Press  on the parent unit.
The timer will display on the screen.
2. Press  to reset the timer to **00-00**, then press  or  to adjust the timer.
Each key press represents an interval of 30 minutes, up to an interval of 24 hours.
3. Press  or  to save and start the adjusted timer.
The screen will display **SAVED** before returning to idle screen.
The  diaper change timer button remains lighted when the timer is running.

NOTE

If no key is pressed within 10 seconds after adjusting the timer in step 2, the adjusted timer will be stored automatically, but the timer will not start.

To start the timer, press  and then press  or .

*When the time limit is reached, the  diaper change timer button will flash and the parent unit will emit an alarm for 30 seconds. Press any key on the parent unit to stop the alarm and reset the timer to **00-00**.*

3.4.5 Set sleep timer

1. Press **Zzz** on the parent unit.
2. Press **▼** or **▲** to adjust the timer.
Each key press represents an interval of 30 minutes, up to an interval of 24 hours.
If the next napping time is 2 hours later, press **▼** or **▲** to adjust the timer until **02-00** is displayed.
3. Press **OK/☰** or **Zzz** to save and start the timer.
The screen will display **SAVED** before returning to idle screen.
The **Zzz** sleep timer button remains lighted when the timer is running.

3.4.6 Reset sleep timer

1. Press **Zzz** on the parent unit.
The timer will display on the screen.
2. Press **🎵** to reset the timer to **00-00**, then press **▼** or **▲** to adjust the timer.
Each key press represents an interval of 30 minutes, up to an interval of 24 hours.
3. Press **OK/☰** or **Zzz** to save and start the adjusted timer.
The screen will display **SAVED** before returning to idle screen.
The **Zzz** sleep timer button remains lighted when the timer is running.

NOTE

If no key is pressed within 10 seconds after adjusting the timer in step 2, the adjusted timer will be stored automatically, but the timer will not start.





*To start the timer, press **Zzz** and then press **OK/☰** or **Zzz**.*

*When the time limit is reached, the **Zzz** sleep timer button will flash and the parent unit will emit an alarm for 30 seconds. Press any key on the parent unit to stop the alarm and reset the timer to **00-00**.*









3.5 Lullaby

You can play lullaby to drown out disturbances so that your child can slumber peaceful and easily.



3.5.1 Select lullaby on the baby unit

1. Press /  on the baby unit to enter lullaby menu.
2. Press /  repeatedly to select your preferred lullaby.

3.5.2 Start or end lullaby playback from the baby unit











1. Press /  on the baby unit to enter lullaby menu.
2. Press /  or  to start playing the last selected lullaby.
3. Press /  or  to end playback.

3.5.3 Start or end lullaby playback from the parent unit

1. To start lullaby playback, press  when the parent unit is not in use.
2. To end lullaby playback, press .


3.6 Select display language for the parent unit











Choose from 3 languages.

1. Press /  on the parent unit when is not in use.
2. Press  or  to scroll to **LANGUAGE** and then press / .
3. Press  or  to select **ENGLISH, FRANÇAIS** or **ESPAÑOL**.
4. Press /  to confirm your selection.

3.7 Turn sound alert on or off

You can turn on the sound alert so that the parent unit beeps when a loud sound is detected by the baby unit.


 is displayed when sound alert is enabled.

1. Press /  on the parent unit when it is not in use.
2. Press  or  to scroll to **SOUND ALERT** and then press / .
3. Press  or  to select **ON?** when the current setting is off, or **OFF?** when the current setting is on.
4. Press /  to confirm.






3.8 Talk to the Baby Unit

You can use the **TALK** function of the parent unit to talk to and comfort your baby.

To talk to the baby unit:

1. Press and hold  on the parent unit.
2. Speak towards the microphone on the parent unit.
Your voice will be broadcasted to the baby unit.

3.9 Reset settings to default

1. Press and hold  on the parent unit when it is not in use.
2. Press  or  to scroll to **RESET** and then press .
3. Press  to confirm.
All settings will be reset to default.

4. Disposal of the Device (environment)

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

5. Cleaning

Clean your Digital Audio Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the Digital Audio Baby Monitor with thinners or other solvents and chemicals - this may cause permanent damage to the product which is not covered by the warranty.
- Keep your Digital Audio Baby Monitor away from hot, humid areas or strong sunlight, and do not let it get wet.
- Every effort has been made to ensure high standards of reliability of your Digital Audio Baby Monitor. However, if something does go wrong, please do not try to repair it yourself - contact Customer Service for assistance.

IMPORTANT


Always switch off and disconnect the power adapter before cleaning your Digital Audio Baby Monitor.

6. Troubleshooting

Power/Link Indicator on the Parent Unit does not come on

- Check whether the parent unit is powered on.
- Check whether the supplied battery pack is correctly installed and that they are not drained.
- Recharge the parent unit by connecting it to the mains power.


Power/Link Indicator on the Baby Unit flashes

- The parent unit and the baby unit may be out of range with each other. Reduce the distance between the units, but not closer than 1 metre.
- The baby unit may be powered off. Press and hold  to power on the baby unit.

Charging Indicator on the Parent Unit screen flashes

- Battery pack in the parent unit is running low. Connect the parent unit to the mains power with the supplied power adapter for recharging.

The Parent Unit beeps

- The parent unit may have lost connection with the baby unit. Reduce the distance between the parent unit and the baby unit, but not closer than 1 metre.
- The baby unit may be powered off. Press and hold  to power on the baby unit.
- Battery pack in the parent unit is running low. Connect the parent unit to the mains power with the supplied power adapter for recharging.

Cannot hear sound or baby crying from the Parent Unit

- The volume level in the parent unit may be set too low, increase the volume level of the parent unit. Refer to section 3.2 for volume level settings.
- The parent unit and the baby unit may be out of range with each other. Reduce the distance between the units, but not closer than 1 metre.

The Digital Audio Baby Monitor system produces a high-pitched noise

- The parent unit and the baby unit are too close to each other. Make sure that the parent unit and baby unit are at least 1 metre away from each other.
- The speaker volume of the parent unit may be set too high. Decrease the volume of the parent unit. Refer to section 3.2 for volume level settings.

Battery pack in the Parent Unit is running low quickly

- The volume level of the parent unit may be set too high, which consumes power. Decrease the volume level of the parent unit. Refer to section 3.2 for volume level settings.

7. General Information

If your product is not working properly, read this Quick Start Guide or the User's Guide of one of the models listed on page 1.

Contact Customer Service:

+491805 938 802 in Europe

Email: motorola-mbp@tdm.de

Consumer Products and Accessories Limited Warranty (“Warranty”)

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD (“BINATONE”).

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product (“Product”) or certified accessory (“Accessory”) sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY BY STATE, PROVINCE OR COUNTRY. FOR CONSUMERS WHO ARE COVERED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE OR, IF DIFFERENT, THEIR COUNTRY OF RESIDENCE, THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS AND REMEDIES CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS. FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorised distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	Two (2) years from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for Ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorised Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than

MOTOROLA, BINATONE or its authorised service centres, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

+491805 938 802 in Europe

Email: motorola-mbp@tdm.de

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorised Repair Centre.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with the said purchase.

EU Declaration of Conformity (DoC)

Hereby, Binatone Telecom PLC declares that the radio equipment type is in compliance with RE Directive 2014/53/EU. The full text of the EU declaration of conformity is available on the website :

<https://hubbleconnected.com/eu/eudocuments-of-conformity>

8. Technical Specifications

Baby Unit

Frequency	1881.792 - 1897.344 MHz
Channels	10
Operating Temperature	5°C - 45°C
Power Adapter	RJ-AS060450E002 (Ruijing) or, S003IV0600045 (TenPao) Input: 100-240VAC, 50/60Hz, 150mA Output: DC6V, 450mA WARNING <i>Use only with supplied power supply.</i>

Charging Pad

Operating Temperature	5°C - 45°C
Power Adapter	RJ-AS060450E002 (Ruijing) Input: 100-240VAC, 50/60Hz, 150mA Output: DC6V, 450mA WARNING <i>Use only with supplied power supply.</i>
Battery Rating	3.6V 600mAh Ni-MH battery pack

Parent Unit

Frequency	1881.792 - 1897.344 MHz
Channels	10
Operating Temperature	5°C - 45°C
Power Adapter	RJ-AS060450E002 (Ruijing) or, S003IV0600045 (TenPao) Input: 100-240VAC, 50/60Hz, 150mA Output: DC6V, 450mA WARNING <i>Use only with supplied power supply.</i>
Battery Rating	2.4V 400mAh Ni-MH battery pack

Specifications are subject to change without prior notice.



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylised M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2020 Motorola Mobility LLC. All rights reserved.



EU_EN Version 1.0
Printed in China