


NUX

MG-300

Modeling Guitar Processor
吉他数字合成效果器

Owner's Manual 使用手册

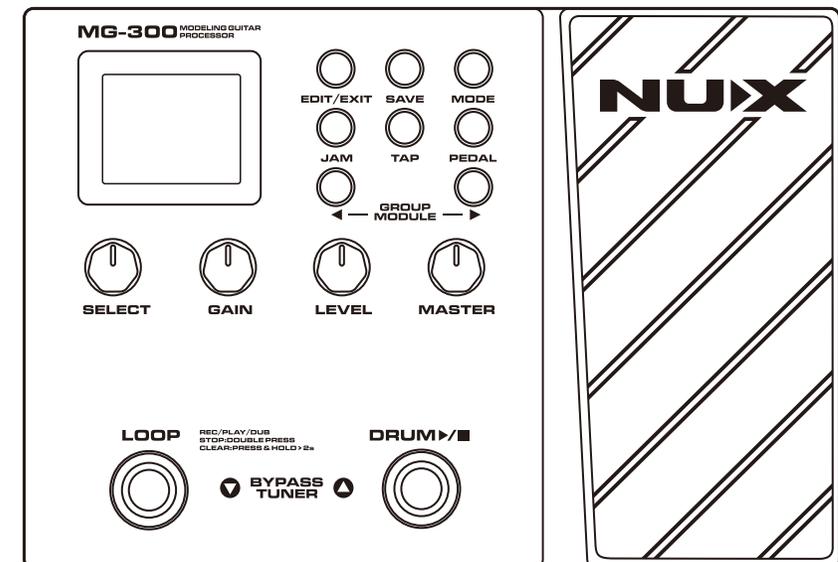

Designed and manufactured by
Cherub Technology Co.,Ltd



www.nuxefx.com Made in China

©2019 Cherub Technology-All rights reserved. No part of this publication may be reproduced in any form without prior written permission of Cherub Technology.



Version 1.0

Copyright

Copyright 2020 Cherub Technology Co. All rights reserved. NUX and MG-300 are trademarks of Cherub Technology Co. Other product names modeled in this product are trademarks of their respective companies that do not endorse and are not associated or affiliated with Cherub Technology Co.

Accuracy

Whilst every effort has been made to ensure the accuracy and content of this manual, Cherub Technology Co. makes no representations or warranties regarding the contents.

WARNING!-IMPORTANT SAFETY INSTRUCTIONS BEFORE CONNECTING, READ INSTRUCTIONS

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION: To reduce the risk of fire or electric shock, do not remove screws. No user-serviceable parts inside. Refer servicing to qualified service personnel.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



The lightning symbol within a triangle means "electrical caution!" It indicates the presence of information about operating voltage and potential risks of electrical shock.



The exclamation point within a triangle means "caution!" Please read the information next to all caution signs.

1. Use only the supplied power supply or power cord. If you are not sure of the type of power available, consult your dealer or local power company.
2. Do not place near heat sources, such as radiators, heat registers, or appliances which produce heat.
3. Guard against objects or liquids entering the enclosure.
4. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
5. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
6. The power supply cord should be unplugged when the unit is to be unused for long periods of time.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and at the point where they exit from the apparatus.
8. Prolonged listening at high volume levels may cause irreparable hearing loss and/or damage. Always be sure to practice "safe listening".

Follow all instructions and heed all warnings
KEEP THESE INSTRUCTIONS!

To develop a versatile compact multi-efx is our dream. We understand it's important to beginners and working musicians to offer them compact size and great sound with affordable price. This a big challenge, and we're proud to say we did it!


MG-300 features with TSAC-HD Amp Modeling algorithm which provides the best sound response and playability, CORE-IMAGE post-efx sound library as our iconic Verdugo pedals, user-friendly interface and PC edit software, Impulse Response, USB audio stream(recording interface with re-amp function), ...etc. It's the best value for money multi-efx in the market.

Features


- TSAC-HD Pre-effect and Amp Modeling delivers realistic feeling and playability.
- Core-Image post-effects offer you studio sound quality.
- Quick Tone™ edit software for quickly choosing and tweaking patches.
- Load 3rd party IRs to expand sound ability.USB audio stream for recording interface with routing setup.
- 56 drum beats and 60 seconds auto tempo detection phrase loop.
- Global 3 bands EQ for quick adjust in live application.

Panel Description


Front Panel

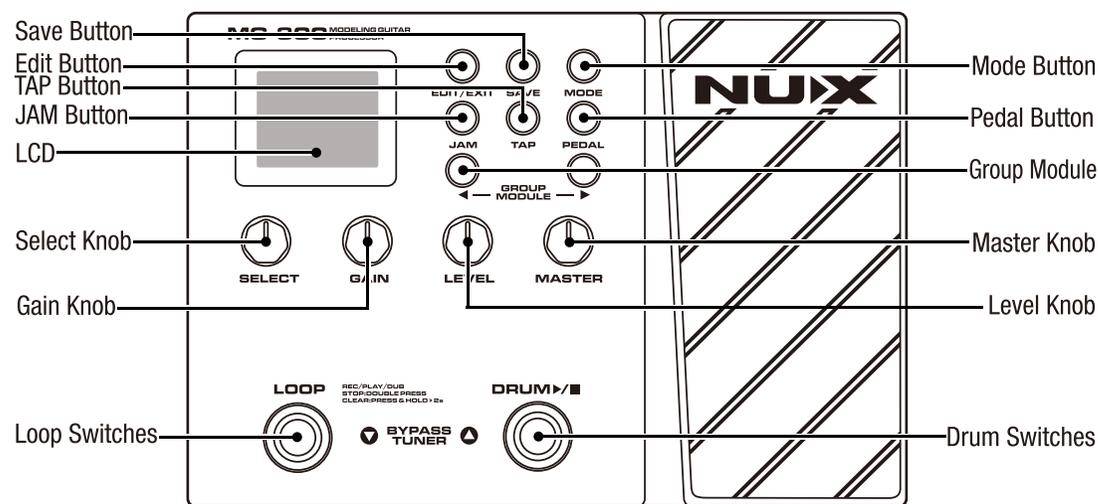

Rear Panel

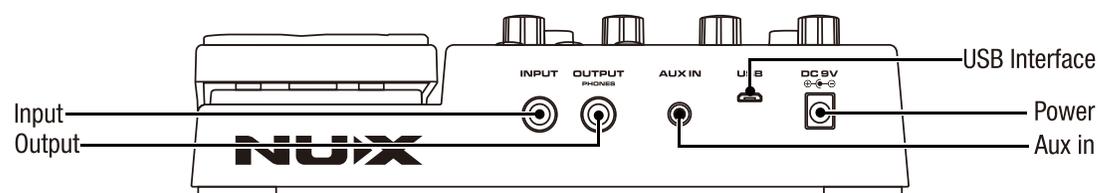

Connection Panel Description

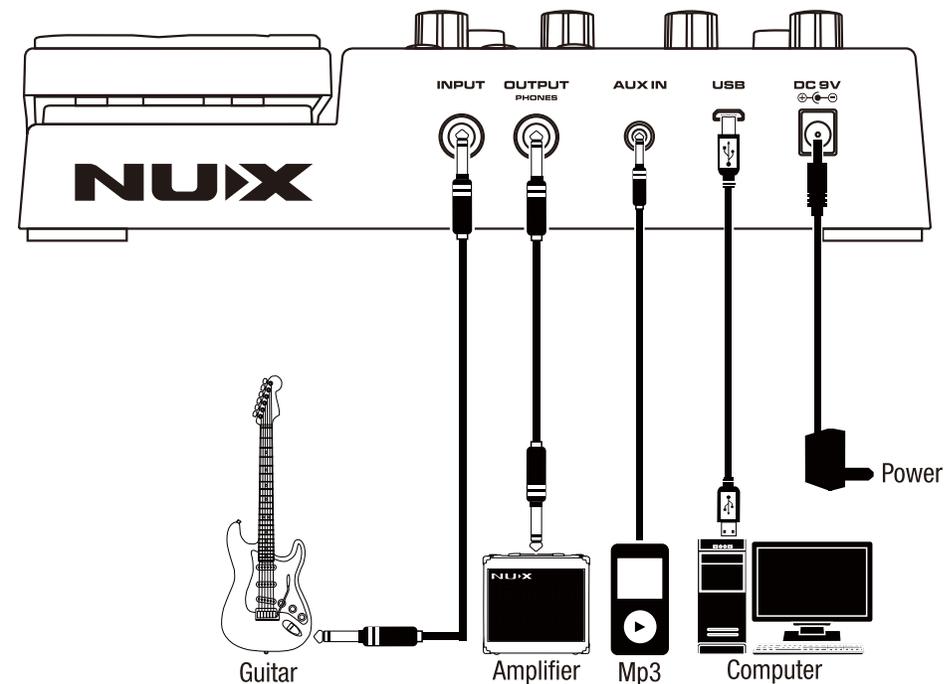

INPUT

6.35 mm (1/4-inch) mono instrument jack input.

OUTPUT

6.35 mm (1/4-inch) main output. (Please check the "Output Button to learn more about the output modes)

AUXILIARY INPUT

3.5 mm (1/8-inch) stereo input for music player connection.

MICRO B USB PORT

You can connect the MG-300 to your computer to use the MG-300 software to create, customize and save your presets. (Please visit nuxefx.com for more information)

Also for future firmware updates*. (For updating the firmware; you must run the pedal in update mode. Plug the Input jack and the USB cable, push and hold both footswitches (Bank DOWN/Bank UP), and plug in the power cable while holding the switches)

*Please visit the nuxefx.com and download the product update guide sheet

Operation

Footswitches



MG-300 has multi-functional sensitive footswitches. You can use to switch the presets UP and DOWN (i.e 1A -> 1B -> 1C) in preset mode, and it also controls the looper and the drums in JAM mode.


● Preset mode

There are 2 preset displays on MG-300: Preset Name and the Pedalboard view. Push and hold the EDIT button to change the view.



● Tuner

Don't forget to tune your guitar before you start playing. Push the both UP/DOWN footswitches at the same time and use the chromatic tuner when you need.

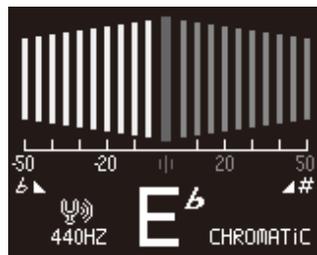

Select Knob



-Preset Screen: Turn the knob clockwise to switch next preset, or anti-clockwise to previous preset. (i.e: 1A 1B 1C 1B etc)
 -Edit Screen: Changes the selected drive/effect unit on the signal path, or turns it OFF.

Gain Knob



-Edit Screen: Adjusts the first parameter on the selected unit.

Level Knob



-Edit Mode: Adjusts the second parameter on the selected unit.

Operation

Master Knob



-Preset Mode: Master output level.
 -Edit Mode: Some of the effects have 3 or more adjustable parameters. When the "PGE" appears on the screen, you can use the MASTER KNOB to reach all-parameters for the selected effect. And you can control the PARAMETER 1 by Gain knob, and PARAMETER 2 by Level knob on the EDIT Screen. You can find the control list on the EFFECTS LIST page.

Edit/EXIT Button



-You can completely customize a selected preset. Push the EDIT/EXIT button to enter the EDIT page. If you want to quit without saving your tone push the EDIT/EXIT button again

Save Button



-Preset Mode: Push the Save button and change the preset name. Choose the letter with Select knob, and move to next letter with Group Module left and right buttons. Then click Save button to store the name, or click the Edit button to cancel.
 -Edit Mode: After you build your own tone, push the Save button and keep it forever. Please use the save button often while you are working on your tone. It's better to start a couple of steps back than starting over again.

Mode Button (Output Modes)



The MG-300 has 5 output modes for better connection to get a perfectly musical sound.
 -Studio Direct: In this mode, you can connect the MG-300 directly to a mixer, active speakers, and an audio interface.

You can change the output mode depending on which equipment you are using with the MG-300, you can select the modes by Select knob.
 -Combo Front: Using the front instrument input on a combo amplifier.
 -Combo Rear: Using the FX LOOP (Return) input on a combo amplifier.
 -Stack Front: Using the front instrument input on the head amplifier.
 -Stack Rear: Using the FX LOOP (Return) input on the head amplifier.

Jam Button



MG-300 have a loop station, 24-bit high recording quality, 56 drum beats in 8 different music styles, and a metronome with 7 different sounds. (Please check the JAM Function menu for looper guide)

Tap Button



You can adjust Delay Time by tapping the button.

Operation

EXP Function Assignment

1. Press EDIT/EXIT button to enter EDIT mode.
2. In edit mode, press PEDAL button to adjust assignment for WAH , EFX , AMP , MOD , DLY , RVB.

Pedal Button / Expression Pedal



You can control the volume or the effects with the expression pedal. You can assign the effect by pushing the PEDAL button in edit mode.

- WAH: Controls the WAH filter.
- EFX: Controls GAIN(DRIVE) parameter of OD/DIST. Controls PITCH parameter of PITCH BENDER.
- AMP: Controls LEVEL parameter of AMP.
- MOD: Controls MIX level of Modulation effects.
- DLY: Controls MIX level of Delay effects.
- RVB: Controls MIX level of Reverb effects.

EXP Pedal Calibration

Hold EDIT/EXIT & SAVE buttons for 3 seconds to enter SYSTEM MENU, then move to PEDAL and press EDIT to PEDAL CALIBRATION. Follow the display instruction to do calibration.



Group Module Buttons




Preset Mode: When you push the Group Module left or right buttons, you can switch between the preset banks. (i.e: 1A 2A 3A 4A)
 Edit Mode: You can select a unit on the signal path for customizing the selected effect.

Operation

How to write your own tone?



Writing a new tone and/or customizing an existing tone is very simple. Press the EDIT button and use the GROUP MODULE buttons to move the cursor left and right to select an effect unit, and adjust with the GAIN, LEVE, and MASTER knobs.

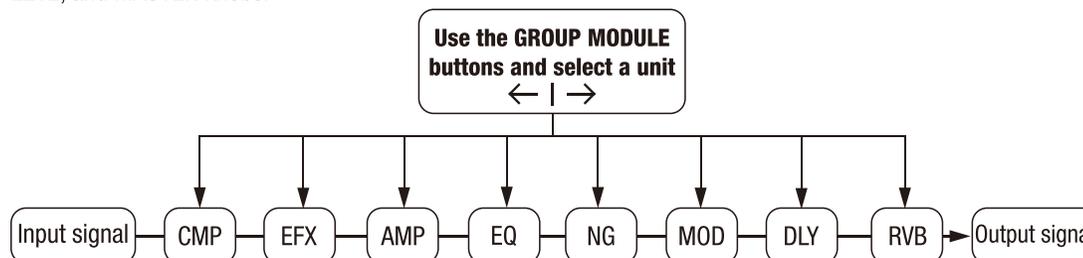

Effects List

COMPRESSION

Select Knob	ON/OFF
Gain Knob	Adjusts the compressor output level
Level Knob	Adjusts the compressor sensitivity

EFX – DRIVE EFFECTS / PITCH SHIFTER

Select Knob	Bypass / Effect Select
-------------	------------------------

DIST+

Gain Knob	Level
Level Knob	Distortion

RC BST

Gain Knob	Level / Bass
Level Knob	Gain / Treble
Master Knob	Page 1/2

AC BST

Gain Knob	Level / Bass
Level Knob	Gain / Treble
Master Knob	Page 1/2

DIST ONE

Gain Knob	Level
Level Knob	Tone
Master Knob	Distortion

T SCREAMER

Gain Knob	Level
Level Knob	Tone
Master Knob	Drive

BLUES DRIVE

Gain Knob	Level
Level Knob	Tone
Master Knob	Drive

MORNING DRIVE

Gain Knob	Level
Level Knob	Tone
Master Knob	Drive

MODERN DISTORTION

Gain Knob	Level
Level Knob	Filter
Master Knob	Distortion

REDIRT

Gain Knob	Level
Level Knob	Tone
Master Knob	Low

CRUNCH

Gain Knob	Level
Level Knob	Tone
Master Knob	Gain

TUBE DR

Gain Knob	Level / Low
Level Knob	Drive / High
Master Knob	Page 1/2

RED FUZZ

Gain Knob	Level
Level Knob	Fuzz

MUFF DIST

Gain Knob	Level
Level Knob	Tone
Master Knob	Sustain

PITCH BENDER

Gain Knob	Level
Level Knob	Pitch Bender
Master Knob	Pitch

Effects List

There are 3 options under the AMP menu: Amplifier / Speaker Cabinet / Microphone.

AMP

Select Knob	Bypass / Amp Select
Gain Knob	Gain
Level Knob	Presence
Master Knob	Level

SPEAKER CABINET

Select Knob	Speaker Cabinet Select
Gain Knob	Bass
Level Knob	Middle
Master Knob	Treble

AMP LIST

JAZZ CLEAN
DELUXE RVB
BASS MATE
TWEEDY
TWIN RVB
HIWIRE
CLASS A 15
CLASS A 30
PLEXI 100W
PLEXI 45
BRIT 800
1987X 50W
SLO 100
FRIEDMAN
DUAL RECT
DIE VH4
VIBRO KING
BUDDA
MR Z 38
SUPER RVB
BRIT BLUES
MATCH D30
BRIT 2000
UBER HIGAIN

MIC

Select Knob	Microphone select
Gain/Level/Master Knobs	Microphone position Edge/Middle/Center

MICROPHONE LIST

DYNAMIC E906
DYNAMIC SM57
CONDENSER U87
CONDENSER C414

SPEAKER CABINET LIST

JAZZ 212
BLACK 112
TWEED 410
TWEED 112
TWIN 212
CUSTOM 412
BLUE 112
BLUE 212
GREEN 412
G12L 412
T75 412
V30 412
SLO 412
HBE 412
RECT 412
BOTM 412
VIBRO 212
EVL 112
BUTQ 212
SUPER 212
BRIT 212
DC 212
G12M 412
UBER 412

You can choose an amp and a speaker cabinet separately, and make your own combination.

Effects List

EQ (You can adjust 6-band equalizer)	
Select Knob	Bypass / Activate EQ
Group Module Buttons	Select the EQ frequencies to control with GAIN/LEVEL/MASTER knobs.
Gain Knob	100 Hz / 800 Hz levels
Level Knob	200 Hz / 1.6 kHz levels
Master Knob	400 Hz / 3.2 kHz levels

NG (Nose Gate)	
Select Knob	Bypass / Activate
Gain Knob	Threshold
Level Knob	Decay

MOD (Modulation effects)	
Select Knob	Bypass / Mod Effect Select

CE-1 CHORUS	
Gain Knob	Depth / Mix
Level Knob	Rate / Pre-Post
Master Knob	Page 1/2

ST CHORUS	
Gain Knob	Depth / Mix
Level Knob	Rate / Pre-Post
Master Knob	Page 1/2

FLANGE	
Gain Knob	Depth / Mix / Pre-Post
Level Knob	Rate / Width
Master Knob	Page 1/2/3

FLANGER	
Gain Knob	Depth / Mix / Pre-Post
Level Knob	Rate / Width
Master Knob	Page 1/2/3

PH90 PHASER	
Gain Knob	Depth
Level Knob	Rate
Master Knob	Pre-Post

PH100 PHASER	
Gain Knob	Depth
Level Knob	Rate
Master Knob	Pre-Post

CHORUS +	
Gain Knob	Depth / Mix
Level Knob	Rate / Pre-Post
Master Knob	Page 1/2

U-VIBE	
Gain Knob	Depth / Volume / Pre-Pos
Level Knob	Speed / Chorus-Vibe
Master Knob	Page 1/2/3

TREMLO	
Gain Knob	Depth
Level Knob	Speed
Master Knob	Pre-Post

ROTARY SPEAKER	
Gain Knob	Balance / Dry
Level Knob	Speed / Pre-Post
Master Knob	Page 1/2

EH CHORUS	
Gain Knob	Depth / Mix
Level Knob	Rate / Pre-Post
Master Knob	Page 1/2

Effects List

DLY (Delay effects)	
Select Knob	Bypass / Delay Effect Select

ANALOG DELAY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

MEMORY GUY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

DIGI DELAY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

MOD DELAY	
Gain Knob	Time / Mix / Pre-Post
Level Knob	Feedback / Mode / Sub-Division
Master Knob	Page 1/2/3

TAPE ECHO	
Gain Knob	Time / Mix / Pre-Post
Level Knob	Feedback / Head / Sub-Division
Master Knob	Page 1/2/3

REVERSE DELAY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

ANALOG DELAY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

ANALOG DELAY	
Gain Knob	Time / Mix / Pre-Post
Level Knob	Feedback / Width / Sub-Division
Master Knob	Page 1/2/3

RVB (Reverb effects)	
Select Knob	Bypass / Reverb Effect Select

ROOM REVERB	
Gain Knob	Mix
Level Knob	Decay
Master Knob	Pre-Post

HALL REVERB	
Gain Knob	Mix
Level Knob	Decay
Master Knob	Pre-Post

PLATE REVERB	
Gain Knob	Mix
Level Knob	Decay
Master Knob	Pre-Post

SPRING REVERB	
Gain Knob	Mix
Level Knob	Decay
Master Knob	Pre-Post

JAM Function

Push the Jam button and activate the Looper function, you can select a beat and Play/Stop drums with the bank "UP" footswitch.

And use the looper actions with bank "DOWN" footswitch.



Push the LOOP footswitch to record, and push again to finish recording, the recorded track will start the loop play. During the loop play, push the footswitch and record another track (overdub). After you record second or more overdub tracks: Pushing and holding the LOOP switch for 1 second will stop the last recorded track only.

During the loop play, push the footswitch twice and the loop will stop. After the loop stops, push and hold the loop switch for 1 second to clear the loop.

Drum Beats	
Select Knob	Adjust the drum tempo 40 bpm – 240 bpm
Gain Knob	Beat select
Level Knob	Drum volume
Master Knob	Loop volume

Group Module Buttons
Select the music style
← | →

ROCK	COUNTRY	BLUES	METAL	FUNK
1. Standard	1. Walk Line	1. Slow Blues	1. Double Bass	1. Bounce
2. Swing Rock	2. Bluegrass	2. Boog Man	2. Close Beat	2. East Coast
3. Power Beat	3. Country	3. Chicago	3. Heavy Bass	3. New Mann
4. Smooth	4. Waltz	4. Road Train	4. Fast Rock	4. R&B Funk
5. Mega Drive	5. Train	5. Blues Rock	5. Holy Case	5. 80s Funk
6. Hard Rock	6. Country Rock	6. Shuffle	6. Open Hi-Hat	6. Soul
7. Boogie	7. Slow	7. Sheriff	7. Epic	7. Uncle Jam

JAZZ	BALLAD	POP	METRANOME
1. Jazz Blues	1. Blues	1. Beach Side	1. Sound 1
2. Circle	2. Groovy	2. Big City	2. Sound 2
3. Walking	3. Slow Rock 1	3. Funky Pop	3. Sound 3
4. Jam	4. Slow Rock 2	4. Modern	4. Sound 4
5. Texture	5. Tutorial	5. Modern 2	5. Sound 5
6. Lick Girl	6. R&B	6. Motown	6. Sound 6
7. Skiffle	7. Gospel	7. Resistor	7. Sound 7

Save Your Preset



After you create your tone, do not forget to SAVE before you switch the preset. When you click the SAVE button, you can edit the preset name.

SELECT KNOB: Choose letter
GROUP MODULE BUTTONS ← | → :Move to the next/previous space

CAUTION

Please use the 9V Negative tip power adapter (included the box) to run MG-300. The instrument jack should be plugged to input to power ON the pedal. When you stop playing, please plug out the input cable and the power cable. Also removing all the connected cables could help to last your cables longer.

Specifications

- Sampling Frequency: 48KHz
- A/D Converter: 32bit
- Frequency Response: 20Hz-20000Hz ±1db
- THD+N: <0.03%
- Dynamic: 110dB
- Input: -20dB
- Output: -10dB
- Power: DC 9V ⊕ ⊖
- Dimensions: 230(L)x160(W)x58(H)mm
- Weight: 754g

*Specifications and features are subject to change without notice.

CE mark for European Harmonized Standards

CE Mark which is attached to our company's products of Battery mains the product is in fully conformity with the harmonized standard(s) EN 61000-6-3:2007+A1:2011 & EN 61000-6-1:2007 Under the Council Directive 2004/108/EC on Electromagnetic Compatibility.



www.nuxefx.com

Made in China

请注意！重要安全说明。
在连接使用前，阅读以下说明。

警告: 为减少火灾或触电的危险，请勿将本设备置于雨中或潮湿的地方。

注意: 为避免火灾或触电等危险，请勿擅自拆卸本产品。维修本产品内部部件对于非专业人员来说较为困难，若有损坏请交给专业维修人员处理。

注意: 本设备已经过测试，证明符合FCC规则第15部分的B级数字设备的限制规定。操作应符合以下两个条件：
(1) 本设备不会产生有害干扰，且 (2) 本设备必须接受任何干扰，包括可能会导致非正常操作的干扰。

1. 仅能使用与出厂附带规格相同的电源及电源线。如果您不确定可用的电源类型，请咨询您的经销商或当地的电力公司。
2. 请勿放置在热源附近，如散热器、电热器，或其他产生高热量的设备。
3. 请勿让液体、灰尘及其他物体进入本设备。
4. 打开或取下后盖板可能会产生触电或其它危险，请勿尝试自行维修本产品。如需维修，请联系我司售后热线，或交给专业的维修人员。
5. 当设备遭遇电源线或插头损坏、不明物体进入、进水等情况时，请谨慎使用并主动联系售后维修。
6. 如果长时间不使用本设备，应拔掉电源线。
7. 避免踩踏电源线，避免过度绷紧电源线。
8. 人耳长时间接收高音量声音可能会导致无法挽回的听力损害，请始终保持“安全聆听”。

请遵守所有的指示和注意所有警告并保留这些说明！


我们梦想着开发一款全面且紧凑的综合效果器，同时也理解对初学者和音乐工作者来说，紧凑的尺寸搭载好的音色同时兼顾好的价格是很重要的，这是一个很大的挑战，但我们很荣幸的说我们做到了。

MG-300搭载TSAC-HD音箱模拟算法为您提供良好的音色和弹奏手感。我们著名的VERDUGO系列效果器的Core-Image后期效果音色库、友善的操作界面与电脑编辑软件、IR脉冲响应、USB音频传输（可作为带有re-amp功能的声卡）.....等等，这是市场上性价比极高的综合效果器。



特点:

- 内置CD音质真鼓采样鼓机，拥有56种不同风格的节奏型及7种不同音色的节拍器。
- 具有60秒的录音功能并可叠加录音。
- 多功能表情踏板可实时调节音量、控制哇音或改变其他效果的参数。
- 全图形化操作界面，调节方便，快速入门。
- 多达72组预设，36组出厂预设+ 36组用户预设
- 32-bit 数字音频信号处理器搭配48kHz/32bit的专业数模转换音频电路。

正面板

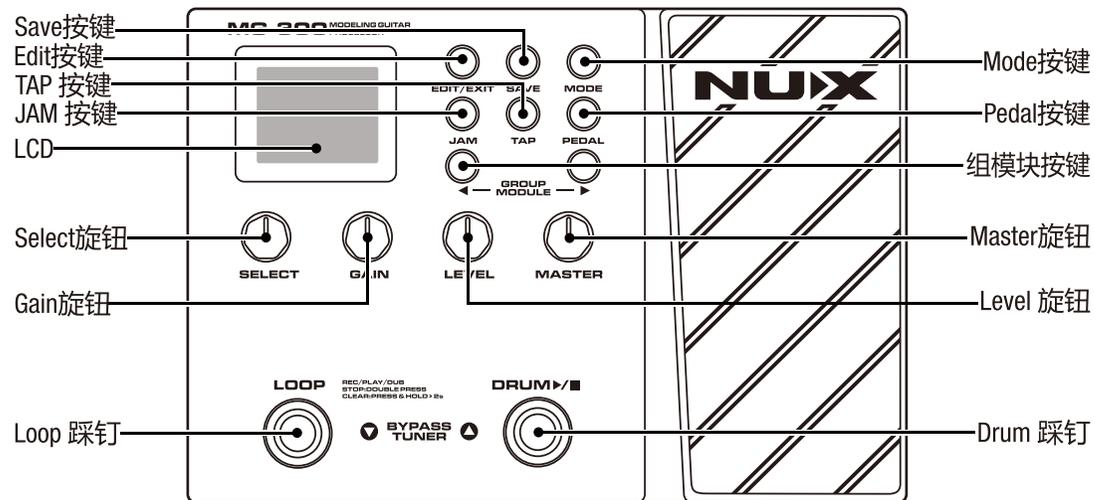

接口

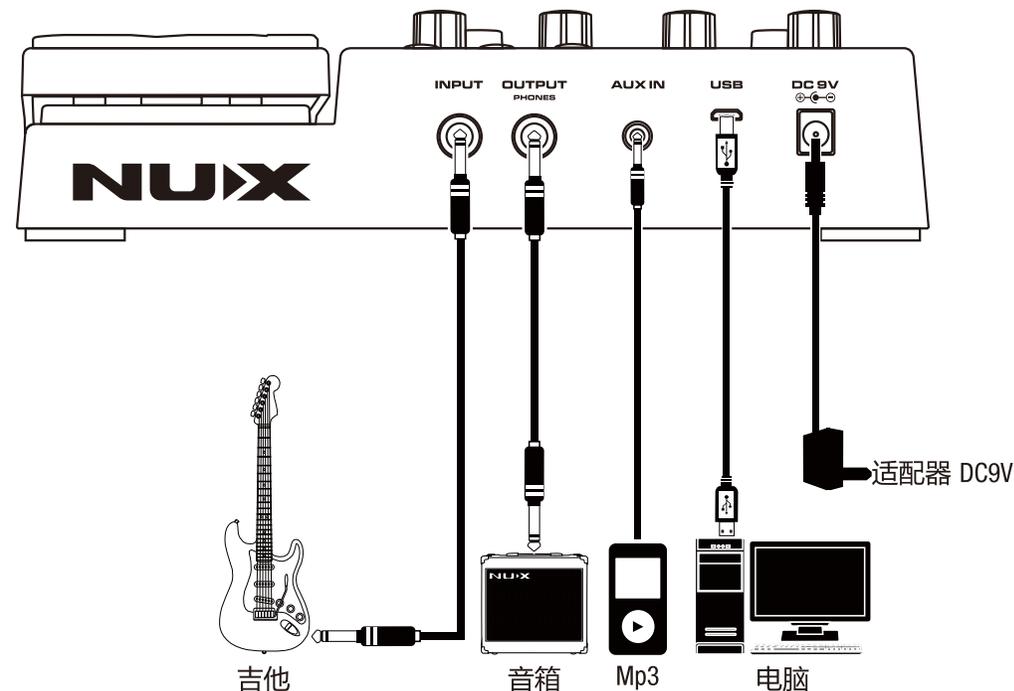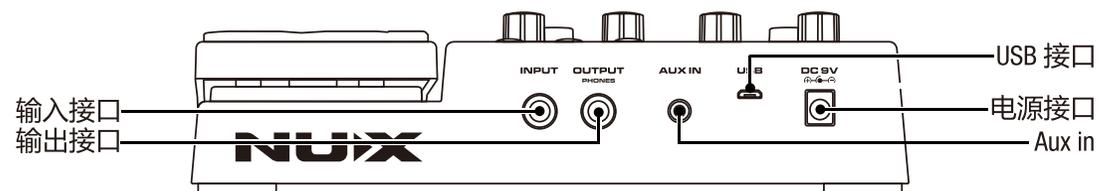

INPUT 接口

6.35mm 主输入接口。

OUTPUT接口

6.35mm 输出接口，同时这个接口也能连接耳机做静音练习。

AUX IN 接口

3.5mm辅助音频输入接口，请使用立体声音频线将您的音频播放设备连接至这个接口。

Micro-B USB接口

预留固件升级接口，请使用合格的数据线将本体与电脑连接。详情请访问我们的官方网站 cn.nuxefx.com。

踩钉



预设模式下，LOOP踩钉以及DRUM踩钉可用于切换预设。
即兴演奏模式下，LOOP踩钉可用于控制循环乐句的录制、播放、叠加、清除以及停止；DRUM踩钉可以用于控制鼓机的播放与停止。


●预设模式显示方式

MG-300的预设模式有两种显示方式，您可以根据偏好通过长按EDIT按钮来切换。字符显示给人一种神秘的感觉而图形显示则让人一目了然。



●调音模式

MG-300内置了高精度调音程序，我们建议您在练习或演出前为您的吉他调音。您只需要同时踩下LOOP和DRUM踩钉即可进入调音模式，调音结束后再次同时踩下LOOP和DRUM踩钉即可退出调音模式。

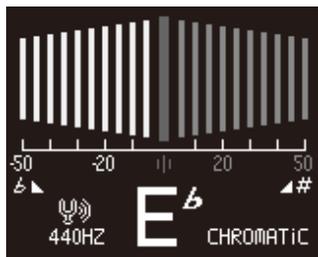

Select 旋钮



SELECT

预设模式下，转动此旋钮可快速切换预设。
编辑模式下，顺时针转动此旋钮可切换当前所选预设下所包含的不同效果器/音箱；逆时针转动此旋钮可关闭当前所选效果模块。

Gain 旋钮



GAIN

编辑模式下，转动此旋钮来调整当前可调的第一个参数。

Level 旋钮



LEVEL

编辑模式下，转动此旋钮来调整当前可调的第二个参数。

Master 旋钮



MASTER

预设模式下，转动此旋钮来调整全局输出音量大小。
编辑模式下，转动此旋钮来调整当前可调的第三个参数或翻页（当可调参数多余三个时会出现“PAGE”字样）。

注意：AMP及EQ模块参数调节的翻页需要通过GROUP MODULE组合按钮来实现。

Edit 按键



EDIT/EXIT

如果您想要对本体内置的预设音色进行调整，可按此按钮进入编辑模式；如果您想放弃对预设音色的调整请再按此按钮一次即可返回预设模式。

Save 按键



SAVE

预设模式下，按此按钮一次可更改当前预设名称。修改预设名称时请使用SELECT旋钮来选择当前位置的字符，使用GROUP MODULE组合按钮来切换至下一个或者上一个字符位置。修改完毕后再按一次此SAVE按钮确认修改，如果您想要放弃修改预设名称请按一次EDIT按钮。

编辑模式下，当您完成对本体预设音色的调整后，可按此按钮一次来保存调整。

Mode 按键



MODE

MG-300内置了五种输出模式，以满足您在不同使用场景下的需求。进入输出模式选择界面后请使用SELECT旋钮来选择最适合的输出模式。

STUDIO DIRECT: 如果本体输出信号的接收设备为调音台、有源喇叭或声卡等设备时请选用此模式。

COMBO FRONT: 如果本体输出信号的接收设备为一体式吉他音箱且接入其主输入接口时，请选用此模式。

COMBO REAR: 如果本体输出信号的接收设备为一体式吉他音箱但接入其FX LOOP的RETURN接口时，请选用此模式。

STACK FRONT: 如果本体输出信号的接收设备为分体式吉他音箱且接入其主输入接口时，请选用此模式。

STACK REAR: 如果本体输出信号的接收设备为分体式吉他音箱但接入其FX Loop的RETURN接口时，请选用此模式。

Jam 按键



即兴演奏模式按钮，用于进入或退出即兴演奏模式。
即兴演奏模式下您可以使用MG-300内置的乐句循环功能以及鼓机功能。

Tap按键



TAP按钮具有两个功能：第一个是在即兴演奏模式设定鼓机的速度；第二个是设定某些效果的参数，例如合唱效果的变化速度或是延时效果延时长。

表情踏板 功能设置

- 1.按下EDIT/EXIT按键进入『编辑模式』。
- 2.在编辑模式下，按PEDAL按键选择表情踏板控制WAH, EFX, AMP, MOD, DLY, RVB。

Pedal 按键



表情踏板功能设定按钮，您可以根据实际需要使用此按钮来设定表情踏板的工作模式。

WAH:控制哇音的滤波效果。

EFX:控制过载/失真GAIN(DRIVE)参数或控制PITCH BENDER的PITCH参数。

AMP:控制AMP效果中的LEVEL参数。

MOD:控制调制效果的混合量。

DLY:控制延迟效果的混合量。

RVB:控制混响效果的混合量。

表情踏板 校正设置

长按EDIT/EXIT及SAVE按键3秒后进入SYSTEM MENU（系统菜单），选择PEDAL并按压EDIT进行PEDAL CALIBRATION（表情踏板校正）。依照屏幕指示来进行踏板校正。


组模块按键



预设模式下，可使用本组合按钮快速切换预设组别（1A 2A 3A 4A）。
编辑模式下，可使用本组合按钮切换信号链各个位置的可选设备。



MG-300内置效果详解

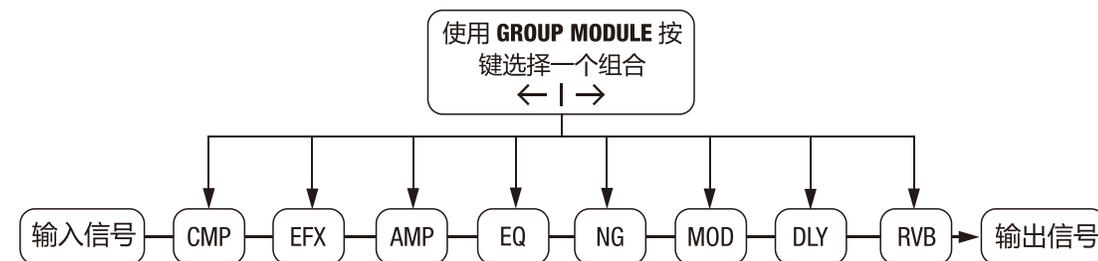

效果信号链

MG-300的完整效果信号链如下：

压缩器→前级效果→箱体模拟→均衡→噪声门→周边效果→延时效果→混响
如上图所示，MG-300的效果模块可以当作八个单一效果的组合。每个效果模块包含若干效果模型。每个模型效果器及其参数都可以根据您的偏好进行独立且灵活地调节（开启，关闭，调整，保存）。

效果模型位置调节

MG-300的MOD和DLY效果模块支持位置移动，您可在效果模块中的PAGE选项中找到POST或PRE，转动相对应的旋钮，选择将效果模块放到音箱前或音箱后。

效果调节列表

COMPRESSION	
Select Knob	ON/OFF
Gain Knob	Adjusts the compressor output level
Level Knob	Adjusts the compressor sensitivity

EFX – DRIVE EFFECTS / PITCH SHIFTER	
Select Knob	Bypass / Effect Select

MODERN DISTORTION	
Gain Knob	Level
Level Knob	Filter
Master Knob	Distortion

DIST+	
Gain Knob	Level
Level Knob	Distortion

REDIRT	
Gain Knob	Level
Level Knob	Tone
Master Knob	Low

RC BST	
Gain Knob	Level / Bass
Level Knob	Gain / Treble
Master Knob	Page 1/2

CRUNCH	
Gain Knob	Level
Level Knob	Tone
Master Knob	Gain

AC BST	
Gain Knob	Level / Bass
Level Knob	Gain / Treble
Master Knob	Page 1/2

TUBE DR	
Gain Knob	Level / Low
Level Knob	Drive / High
Master Knob	Page 1/2

DIST ONE	
Gain Knob	Level
Level Knob	Tone
Master Knob	Distortion

RED FUZZ	
Gain Knob	Level
Level Knob	Fuzz

T SCREAMER	
Gain Knob	Level
Level Knob	Tone
Master Knob	Drive

MUFF DIST	
Gain Knob	Level
Level Knob	Tone
Master Knob	Sustain

BLUES DRIVE	
Gain Knob	Level
Level Knob	Tone
Master Knob	Drive

PITCH BENDER	
Gain Knob	Level
Level Knob	Pitch Bender
Master Knob	Pitch

MORNING DRIVE	
Gain Knob	Level
Level Knob	Tone
Master Knob	Drive

效果调节列表

AMP菜单下有3个选项：放大器、扬声器、麦克风。

AMP		MIC	
Select Knob	Bypass / Amp Select	Select Knob	Microphone select
Gain Knob	Gain	Gain/Level/Master Knobs	Microphone position Edge/Middle/Center
Level Knob	Presence		
Master Knob	Level		

SPEAKER CABINET		MICROPHONE LIST	
Select Knob	Speaker Cabinet Select		DYNAMIC E906
Gain Knob	Bass		DYNAMIC SM57
Level Knob	Middle		CONDENSER U87
Master Knob	Treble		CONDENSER C414

AMP LIST		SPEAKER CABINET LIST	
	JAZZ CLEAN		JAZZ 212
	DELUXE RVB		BLACK 112
	BASS MATE		TWEED 410
	TWEEDY		TWEED 112
	TWIN RVB		TWIN 212
	HIWIRE		CUSTOM 412
	CLASS A 15		BLUE 112
	CLASS A 30		BLUE 212
	PLEXI 100W		GREEN 412
	PLEXI 45		G12L 412
	BRIT 800		T75 412
	1987X 50W		V30 412
	SLO 100		SLO 412
	FRIEDMAN		HBE 412
	DUAL RECT		RECT 412
	DIE VH4		BOTM 412
	VIBRO KING		VIBRO 212
	BUDDA		EVL 112
	MR Z 38		BUTQ 212
	SUPER RVB		SUPER 212
	BRIT BLUES		BRIT 212
	MATCH D30		DC 212
	BRIT 2000		G12M 412
	UBER HIGAIN		UBER 412

您可以分别选择一个放大器和一个扬声器并自行组合。

效果调节列表

EQ (You can adjust 6-band equalizer)	
Select Knob	Bypass / Activate EQ
Group Module Buttons	Select the EQ frequencies to control with GAIN/LEVEL/MASTER knobs.
Gain Knob	100 Hz / 800 Hz levels
Level Knob	200 Hz / 1.6 kHz levels
Master Knob	400 Hz / 3.2 kHz levels

NG (Nosie Gate)	
Select Knob	Bypass / Activate
Gain Knob	Threshold
Level Knob	Decay

MOD (Modulation effects)	
Select Knob	Bypass / Mod Effect Select

CE-1 CHORUS	
Gain Knob	Depth / Mix
Level Knob	Rate / Pre-Post
Master Knob	Page 1/2

ST CHORUS	
Gain Knob	Depth / Mix
Level Knob	Rate / Pre-Post
Master Knob	Page 1/2

FLANGE	
Gain Knob	Depth / Mix / Pre-Post
Level Knob	Rate / Width
Master Knob	Page 1/2/3

FLANGER	
Gain Knob	Depth / Mix / Pre-Post
Level Knob	Rate / Width
Master Knob	Page 1/2/3

PH90 PHASER	
Gain Knob	Depth
Level Knob	Rate
Master Knob	Pre-Post

PH100 PHASER	
Gain Knob	Depth
Level Knob	Rate
Master Knob	Pre-Post

CHORUS +	
Gain Knob	Depth / Mix
Level Knob	Rate / Pre-Post
Master Knob	Page 1/2

U-VIBE	
Gain Knob	Depth / Volume / Pre-Pos
Level Knob	Speed / Chorus-Vibe
Master Knob	Page 1/2/3

TREMLO	
Gain Knob	Depth
Level Knob	Speed
Master Knob	Pre-Post

ROTARY SPEAKER	
Gain Knob	Balance / Dry
Level Knob	Speed / Pre-Post
Master Knob	Page 1/2

EH CHORUS	
Gain Knob	Depth / Mix
Level Knob	Rate / Pre-Post
Master Knob	Page 1/2

效果调节列表

DLY (Delay effects)	
Select Knob	Bypass / Delay Effect Select

ANALOG DELAY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

MEMORY GUY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

DIGI DELAY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

MOD DELAY	
Gain Knob	Time / Mix / Pre-Post
Level Knob	Feedback / Mode / Sub-Division
Master Knob	Page 1/2/3

TAPE ECHO	
Gain Knob	Time / Mix / Pre-Post
Level Knob	Feedback / Head / Sub-Division
Master Knob	Page 1/2/3

REVERSE DELAY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

ANALOG DELAY	
Gain Knob	Time / Mix / Sub-Division
Level Knob	Feedback / Pre-Post
Master Knob	Page 1/2/3

ANALOG DELAY	
Gain Knob	Time / Mix / Pre-Post
Level Knob	Feedback / Width / Sub-Division
Master Knob	Page 1/2/3

RVB (Reverb effects)	
Select Knob	Bypass / Reverb Effect Select

ROOM REVERB	
Gain Knob	Mix
Level Knob	Decay
Master Knob	Pre-Post

HALL REVERB	
Gain Knob	Mix
Level Knob	Decay
Master Knob	Pre-Post

PLATE REVERB	
Gain Knob	Mix
Level Knob	Decay
Master Knob	Pre-Post

SPRING REVERB	
Gain Knob	Mix
Level Knob	Decay
Master Knob	Pre-Post

即兴演奏模式详解

在任意界面下按JAM按钮即可进入即兴演奏模式

即兴演奏模式下您可以录制一段长达60秒的循环乐句，您可以通过叠加录音的方式增强循环乐句的丰满度以及复杂程度。



踩下LOOP踩钉一次即可开始录音，第一轨录制结束后再踩一次踩钉结束随后已经录制好的第一轨会自动播放，此时再踩LOOP踩钉一次即可开始叠加录音，叠加录音结束时踩LOOP踩钉一次完成叠加录音。如果您对叠加录音不满意，可踩住LOOP踩钉一秒种便可撤销最近保存的一次叠加录音。

循环乐句播放过程中，您可以快速踩下LOOP踩钉来停止播放。播放停止后，您可以踩住踩钉一秒来清除整个已经录制完毕的循环乐句。

Drum Beats	
Select Knob	Adjust the drum tempo 40 bpm – 240 bpm
Gain Knob	Beat select
Level Knob	Drum volume
Master Knob	Loop volume

Group Module Buttons
Select the music style
← | →

ROCK	COUNTRY	BLUES	METAL	FUNK
1. Standard	1. Walk Line	1. Slow Blues	1. Double Bass	1. Bounce
2. Swing Rock	2. Bluegrass	2. Boog Man	2. Close Beat	2. East Coast
3. Power Beat	3. Country	3. Chicago	3. Heavy Bass	3. New Mann
4. Smooth	4. Waltz	4. Road Train	4. Fast Rock	4. R&B Funk
5. Mega Drive	5. Train	5. Blues Rock	5. Holy Case	5. 80s Funk
6. Hard Rock	6. Country Rock	6. Shuffle	6. Open Hi-Hat	6. Soul
7. Boogie	7. Slow	7. Sheriff	7. Epic	7. Uncle Jam

JAZZ	BALLAD	POP	METRANOME
1. Jazz Blues	1. Blues	1. Beach Side	1. Sound 1
2. Circle	2. Groovy	2. Big City	2. Sound 2
3. Walking	3. Slow Rock 1	3. Funky Pop	3. Sound 3
4. Jam	4. Slow Rock 2	4. Modern	4. Sound 4
5. Texture	5. Tutorial	5. Modern 2	5. Sound 5
6. Lick Girl	6. R&B	6. Motown	6. Sound 6
7. Skiffle	7. Gospel	7. Resistor	7. Sound 7

存储预设



创建音调后，在切换预设之前不要忘记保存。单击“保存”按钮时，可以编辑预设名称。

选择旋钮：选择字母。

组模块按钮 ← | →：移动到下一个/上一个或空格。

如需将当前音色存储到其它位置，请在用户自定义音色模式下点击SAVE按键，进入存储编辑模式，通过踩钉来选择需要存储的新位置，选定后再次按下SAVE 按键即存储完成。

注意：

请使用9V外正内负电源适配器供电。插入吉他输入连接线以接通电源。停止播放时，请拔出输入线和电源线。同时，卸下所有连接的电缆有助于延长电缆的使用寿命。

工程模式说明

1.恢复出厂设置



长按EDIT/EXIT和SAVE组合键进入工程模式，进入FACTORY选项，选择YES，点击SAVE按键即可恢复出厂设置。

2.表情踏板重置



进入PEDAL选项，根据屏幕提示抬起踏板，点击左侧踩钉；然后根据屏幕提示踩下踏板，点击左侧踩钉。即可完成表情踏板重置。

3.USB输出选项



进入USB输出选项，REC LEVEL为录音音量调节，此时对应面板GAIN旋钮；PLAY LEVEL为回放音量调节，此时对应面板LEVEL旋钮；ROUTING MODE为USB输出模式选项，此时对应面板MASTER旋钮，您可选择NORMAL（普通模式），REAMP模式或DRY OUT（听湿录干）模式。

4.INFO选项



点击进入即可查阅本机固件版本号。

技术规格

- 采样频率：48KHz
- 数字/模拟转换器：32bit
- 频率响应范围：20Hz-20000Hz ±1db
- 谐波失真：0.03%
- 动态范围：110dB
- 输入：-20dB
- 输出：-10dB
- 电源：DC 9V 外正内负 ⊕ - ⊖
- 体积：230(L)x160(W)x58(H)mm
- 重量：754g

*技术规格如有变更，恕不另行通知。

随机附件：使用手册、DC9V适配器、USB数据线

合格证 Certificate

检验员
Inspector

名称
Name 吉他数字合成效果器

型号
Type MG-300

生产日期
Date

本产品经检验合格
This product is inspected and approved.
执行标准: Q/WKDZ 001-2020
Product is certificated with Q/WKDZ 001-2020

有关产品中所含有害物质的说明

为了控制和减少电器电子产品废弃后对环境造成的污染，本资料就本公司产品中所含的特定有害物质及其安全性予以说明。本资料适用于2016年7月1号以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年数。所谓环保使用期限是指在制造日起的规定期限内，产品中所含的有害物质不致引起环境污染，不会对人体、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明，正确使用产品的条件下才有效。不当的使用，将会导致有害物质泄漏的危险。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
主体	塑胶件	○	○	○	○	○
	五金件	×	○	○	○	○
	硅胶件	○	○	○	○	○
	内置电路板	×	○	○	○	○
附件	*交流电源适配器、线缆					
	×	○	○	○	○	○

*表示某些产品可能不含有这些项目，上表当中的信息仅在产品含有这些项目时适用。

本表格依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求，因根据现有的技术水平，还没有什么物质能够代替它。

保护环境

如果需要废弃本产品，请遵循本地相关指引，请勿随意丢弃或作为生活垃圾处理，以避免对环境造成污染。

质量承诺

亲爱的 NUX 用户：

在您使用 NUX 产品时，请仔细参阅产品说明书，当您有疑问和困难时，请拨打售后服务热线：400-990-9866

- 一周内出现质量问题可退货退款
- 一月内出现质量问题可调换
- 一年内出现质量问题可免费维修
- 终身享有咨询和维修服务

[请向销售商索取正规发票并予以保存]

换修政策

一、包换政策：

- 1、消费者通过正规授权渠道购买的产品，自购机之日起1个月之内，在正常使用情况下出现非人为的产品性能故障、且产品外观及包装保持完好，可向所购机的经销商换机。
- 2、消费者在换机时应出示由经销商开出的购机凭证，否则经销商可以不予更换。

二、保修政策：

- 1、消费者通过正规授权渠道购买的产品(以发票所示销售方为准)，自购买之日起1年内，若出现非人为损坏的性能故障，可享免费维修服务。
- 2、对于超过1年或人为及不可抗力因素造成损坏的产品，我司可提供有偿维修服务。

*本售后政策仅适用于中国大陆地区，其它国家及地区以当地售后政策及法律法规为准。

售后服务地址

广东省珠海市高新区唐家湾镇科技九路10号
珠海市蔚科科技开发有限公司 售后服务部
邮编:519085

制造商: 深圳市蔚科电子科技有限公司 制造商地址: 深圳市南山区蛇口兴华路6号南海意库1号楼507
电话: 0755-26869866 网址: cn.nuxefx.com 生产商: 珠海市蔚科科技开发有限公司
生产商地址: 珠海市高新区唐家湾镇科技九路10号 电话: 0756-3689866