

Read these instructions carefully before using your microwave oven, and store them for future reference.

If you follow the instructions, your oven will provide you with many years of good service.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.

(b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

(c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded affecting the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	K94250MW
Rated Voltage:	230V~ 50Hz
Rated Input Power(Microwave):	1450 W
Rated Output Power(Microwave):	900 W
Rated Input Power(Grill):	1000 W
Oven Capacity:	25 L
Turntable Diameter:	Ø 315 mm
External Dimensions:	513mmX410mmX307mm
Net Weight:	Approx. 15.5 kg

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

- 1. Read and follow the specific:"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
- 2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children less than 8 years of age shall be kept away unless continuously supervised.
- 3. Keep the appliance and its cord out of reach of children less than 8 years.
- 4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 5. WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- 6. WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

- 7. WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- 8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- 9. Only use utensils that are suitable for use in microwave ovens.
- 10. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- 11. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- 12. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- 13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- 14. The oven should be cleaned regularly and any food deposits removed.
- 15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- 16. The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with a decorative door.)
- 17. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperaturesensing probe.)

- 18. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
- 19. The microwave oven must be operated with the decorative door open (for ovens with a decorative door.)
- 20. This appliance is intended to be used in household and similar applications such as:
 -staff kitchen areas in shops, offices and other working environments;
 -by clients in hotels, motels and other residential type environments;
 -farm houses;
 -bed and breakfast type environments.
- 21. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- 22. Metallic containers for food and beverages are not allowed during microwave cooking.
- 23. The appliance shall not be cleaned with a steam cleaner.
- 24. The appliance is intended to be used freestanding.
- 25. The rear surface of the appliance must be placed against a wall.
- 26. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- 27. The temperature of accessible surfaces may be high when the appliance is operating.
- 28. WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To Reduce the Risk of Injury to Persons Grounding Installation is needed

DANGER

Electric Shock Hazard. Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

2. If a long cord set or extension cord is used:

1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

2)The extension cord must be a grounding-type 3-wire cord.

3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

- 1. Clean the cavity of the oven after using with a slightly damp cloth.
- 2. Clean the accessories in the usual way in soapy water.
- 3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
- 4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- 5. Cleaning Tip---For easier cleaning of the cavity walls that the food being cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) of water and heat at 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

- 1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
- 2. Cook on maximum power for 1 minute.
- 3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- 4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven


Utensils	Remarks	
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.	
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.	
Metal or metal- trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.	
Metal twist ties	May cause arcing and could cause a fire in the oven.	
Paper bags	May cause a fire in the oven.	
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	
Wood	Wood will dry out when used in the microwave oven and may split or crack.	

SETTING UP YOUR OVEN

Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and the oven cavity. Your oven comes with the following accessories: Glass trav Turntable ring assembly 1 1 Instruction Manual R) -П Ŕ Е 'n Ċ B A) Control panel G B) Turntable shaft C) Turntable ring assembly D) Glass tray E) Observation window F) Door assembly Grill Rack (Cannot be used in microwave G) Safety interlock system function and must be placed on the glass tray)

Turntable Installation

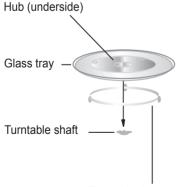

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


Turntable ring assembly

Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Installation

1.Select a level surface that provide enough open space for the intake and/or outlet vents.

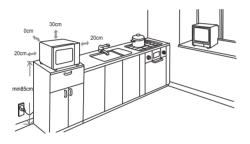

(1) The minimum installation height is 85cm.

(2) The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.

(3) Do not remove the legs from the bottom of the oven.

(4) Blocking the intake and/or outlet openings can damage the oven.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

(5) Place the oven as far away from radios and TV sets as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



Operation Instructions

1. Clock Setting

When the microwave oven is powered, the screen will display "0:00", buzzer will ring once.

1) Press " Clock/ Kitchen Timer " once to select clock function, the hour figures will flash.

2) Turn " 🖑 " to adjust the hour figures, the input time should be within 0--23.

3) Press " Clock/ Kitchen Timer ", the minute figures will flash.

4) Turn " \checkmark " to adjust the minute figures, the input time should be within 0--59.

5) Press " Clock/ Kitchen Timer" to finish clock setting. ":" will flash, and the time will light.

Note: 1) The clock will not work if it is not set when powered.

- 2) During the process of clock setting, if you press " Stop/Clear ", the oven will go back to the previous status automatically.
- 2. Microwave Cooking

Press " Microwave " once,screen will display "P100".Press " Microwave again or turn " "To choose the power you want, and "P100", "P80" "P50", "P30 "P10" will display for each added press. Then press" <u>Start/+30Sec./Confirm</u> " to confirm, and turn " " to set cooking time from 0:05 to 95:00. Press " <u>Start/+30Sec./Confirm</u> " again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as the following steps.

- 1) Press " Microwave " once, the screen display "P100".
- 2) Press " Microwave " once again or turn" $\left< \begin{array}{c} & \\ & \\ & \end{array} \right>$ " to choose 80% microwave power.

3) Press " Start/+30Sec./Confirm " to confirm, and the screen displays "P 80".

- 4) Turn " 📯 " to adjust the cooking time until the oven displays "20:00".
- 5) Press " Start/+30Sec./Confirm" to start cooking.

Note: the step quantities for the adjustment time of the coding switch are as follow:

- 0----1 min : 5 seconds
- 1---5 min : 10 seconds
- 5---10 min : 30 seconds
- 10---30 min : 1 minute
- 30---95 min : 5 minutes

"Microwave" Order	Pad instructions Display	Microwave Power	
1	P100	100%	
2	P80	80%	
3	P50	50%	
4	P30	30%	
5	P10	10%	

3. Grill or Combi cooking

Press " <u>Grill/Combi.</u> " once,screen will display"G",and press " <u>Grill/Combi.</u> "for times or turn the " " to choose the power you want, and "G","C-1" or "C-2" will display for each added press. Then press " <u>Start/+30Sec./Confirm</u> "to confirm, and turn " " to set cooking time from 0:05 to 95:00. Press " <u>Start/+30Sec./Confirm</u> " again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power(C-1) to cook for 10 minutes, you can operate the oven as the following steps.

1) Press " Grill/Combi. " once, the screen display "G".

2) Press " Grill/Combi.	" once again or turn "	🖓 " to choose combi. 1 mode.	
-------------------------	------------------------	------------------------------	--

3) Press "Start/+30Sec./Confirm "to confirm, and the screen displays "C-1".

4) Turn " 🕀 " to adjust the cooking time until the oven displays "10:00".

5) Press " Start/+30Sec./Confirm " to start cooking .

"Grill/Combi." Pad instructions

 Order	Display	Microwave Power	Grill Power
1	G	0%	100%
2	C-1	55%	45%
3	C-2	36%	64%

Note: When half grill time passes, the oven sounds twice, and this is normal. In order to have a better effect of grilling food, you should turn the food over, close the door, and then press " Start/+30Sec./Confirm "to continue cooking. if no operation the oven will continue cooking.

- 4. Quick Start
- 1) In stanby mode, press " Start/+30Sec./Confirm" to start cooking with 100% power, each added press will increase the cookingtime by 30 seconds for up to 95 minutes.
- 2) In microwave, grill and combination cooking or time defrost state, each press of
 " Start/+30Sec./Confirm" can increase the cooking time by 30 seconds.
- 3) In stanby mode, turn " " left to set cooking time with 100% microwave power, then press " Start/+30Sec./Confirm " to start cooking.
- 5. Defrost By Weight
- 1) Press " Weight Defrost " once, and the oven will display "dEF1".

2) Turn " (\mathbf{y}) " to select the weight of food from 100 to 2000 g.

3) Press " Start/+30Sec./Confirm " to start defrosting.

6. Defrost By Time

- 1) Press " Time Defrost " once, and the oven will display "dEF2".
- 2) Turn " (h)" to select the defrost time. The MAX time is 95 minutes.
- 3) Press "Start/+30Sec./Confirm" to start defrosting. The defrost power is P30, and it will not be changed.

7. Kitchen Timer

- 1) Press " Clock/ Kitchen Timer " twice, screen will display 00:00.
- 2) Turn " (), " to enter the correct timer.(The maximum cooking time is 95 minutes.)

3) Press " Start/+30Sec./Confirm" to confirm setting.

4) When the time is reached, the clock indicator will go out. The buzzer will ring 5 times. If the clock is set (24-hour system), the screen will display the current time.

Note: The kitchen Timer is a timer and thus different from the 24-hour clock system.

8. Auto Menu

1) Turn " 🖓 " right to choose the menu, and "A-1" to "A-10" will display.

2) Press " Start/+30Sec./Confirm " to confirm.

3) Turn " $\left< \begin{array}{c} & & \\ & & \\ & & \end{array} \right>$ " to choose the default weight as the menu chart.

4) Press " Start/+30Sec./Confirm " to start cooking.

Example: If you want to use "Auto Menu" to cook 350g of fish.

1) Turn " 🤤	" clockwise till "A-	4" display.
-------------	----------------------	-------------

2) Press " Start/+30Sec./Confirm " to confirm.

3) Turn " (\mathbf{y}) " to select the weight of fish till "350" display.

4) Press " Start/+30Sec./Confirm " to start cooking.


The menu chart:

Menu	Weight	Display
A-1	200 g	200
Pizza	400 g	400
A-2	200 g	200
Potato	400 g	400
	600 g	600
A-3	250 g	250
Meat	350 g	350
	450 g	450
A-4	250 g	250
Fish	350 g	350
-	450 g	450
A-5	200 g	200
Vegetable	300 g	300
	400 g	400
	1(about 120ml)	1
A-6	2(about 240ml)	2
Beverage	3(about 360ml)	3
A-7	50 g(with 450 cold water)	50
Pasta	100 g(with 800 cold water)	100
A-8	50 g	50
Popcorn	100 g	100
A-9	400 g	400
Chicken	800 g	800
	1200 g	1200
A-10	200 g	200
Reheat	400 g	400
	600 g	600

9. Multi-section cooking

At most 2 sections can be set for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.

Example: If you want to defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes, operate it as the following:

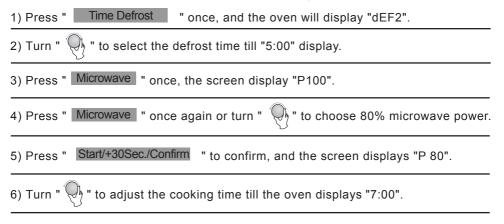

7) Press "Start/+30Sec./Confirm " to start cooking, and buzzer will sound once for the first section, defrosting time counts down; buzzer will sound once again entering the second cooking. when cooking finish, buzzer sounds five times.

10. Inquiring Function

- 1) In states of microwave,grill and combination cooking, press " Microwave ", the current power will be displayed for 3 seconds. After 3 seconds, the oven will turn back to the former state;
- 2) In cooking state, press " Clock/ Kitchen Timer " to inquire the time and the time will display for 3 seconds.

11. Lock-out Function for Children

- Lock: In stanby mode, press " Stop/Clear " for 3 seconds, there will be a long beep denoting entering the children-lock state and the current time will diplay if the time has been set, otherwise, screen will display " **C : : 3**".
- Lock quitting: In locked state, press " Stop/Clear " for 3 seconds, there will be a long "beep" denoting that the lock is released.

Trouble shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
Oven can not be started.	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.

NOTICE ABOUT RECYCLING



Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please

dispose of this equipment at your local community waste collection / recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!

DECLARATION OF CONFORMITY

Herewith, Kalliopi Karyda & Co., LP states that this product complies with the requirements of below directives: EMC-Directive: 14 / 30 / EU Low Voltage Directive: 14 / 35 / EU ErP Directive: 09 / 125 / EC

CE Marking: 93 / 68 / EEC RoHS Directive: 11 / 65 / EU Delegated Directive (EU) 15 / 863

The detailed declaration of conformity can be found at www.morris.gr

IMPORTER: Kalliopi Karyda & Co, LP 87A, 17th November str. 55535, Pylea, Thessaloniki Tel. 2316 006600 Fax. 2316 006650 www.morris.gr