Rohnson®

INSTRUCTION MANUAL

VACUUM CLEANER

R-1562



Please read this instruction manual and keep it for future reference

The vacuum cleaner is intended for room dry cleaning.

SAFETY MEASURES

Read this instruction manual carefully before using the unit and keep it for the whole operation period. Use the unit for its intended purpose only, as specified in this manual. Mishandling of the unit may lead to its breakage and cause harm to the user or damage to his/her property. To avoid the risk of fire, electric shock and to prevent injury, observe the following safety measures.

- Before connecting the unit to the mains, make sure that the voltage specified on the unit corresponds to your home mains voltage.
- To avoid fire, do not use adapters for connecting the unit to the mains.
- Do not leave the vacuum cleaner unattended when it is plugged into the electrical outlet. Always unplug the vacuum cleaner from the mains if it is not being used, before changing attachments or before unit maintenance.
- To prevent the risk of electric shock, do not use the vacuum cleaner outdoors, do not use it for collecting water or any other liquids (do not use the vacuum cleaner on wet surfaces).
- Carry the vacuum cleaner holding it by the carrying handle only.
- Do not use the power cord for carrying the vacuum cleaner, do not close the door if the power cord runs through the doorway, do not let the power cord come in contact with sharp corners or edges of furniture, and with hot surfaces. Do not run over the power cord with the vacuum cleaner while room cleaning as this can damage it.
- Always first switch the vacuum cleaner off with the ON/OFF button and only after that take the power plug out of the mains socket.
- When unplugging the unit, pull the plug but not cord
- Do not touch the power plug or the body of the vacuum cleaner with wet hands.
- When winding the power cord, hold it down with your hand to ensure that the plug does not strike the floor surface.
- Do not cover the unit outlet with any objects.
- Do not switch the unit on if any of its openings are blocked
- Keep hair, free hanging clothes, fingers and other parts of your body away from the vacuum cleaner air inlets.
- Be especially cautious while cleaning the stair landings.
- Do not use the vacuum cleaner for collecting such highly inflammable liquids as gasoline and solvents, do not use the vacuum cleaner in places where such liquids are stored.
- Do not use the vacuum cleaner for collecting water and other liquids, burning or smoking cigarettes, matches, cinders as well as fine dust, for example, of plaster, concrete, flour or ashes.
- Do not use the vacuum cleaner if the inlet and outlet filters are not installed.
- Do not immerse the unit body into water or other liquids.
- Use only the accessories and attachments supplied.
- Clean the vacuum cleaner regularly.
- Keep the vacuum cleaner in a dry cool place.
- Do not use the vacuum cleaner to clean pets.
- Close supervision is necessary when children or disabled persons are near the operating unit.
- This unit is not intended for usage by children. During the unit operation and breaks between operation cycles, place the unit out of reach of children.
- The unit is not intended to be used by people with physical, sensory or mental disabilities (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Do not leave children unattended to avoid them using the unit as a toy.


- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

Attention! *Do not allow children to play with polyethylene bags or packaging film.* ***Danger of suffocation!***

- Regularly check the power plug and power cord integrity for damages.
- If the power cord is damaged, it should be replaced by the manufacturer, a maintenance service or similar qualified personnel to avoid danger
- Do not attempt to repair the unit. Do not disassemble the unit by yourself.
- Transport the unit in the original package only.
- Keep the unit out of reach of children and disabled persons

THE UNIT IS INTENDED FOR HOUSEHOLD USE ONLY. ITS COMMERCIAL USAGE AND USAGE IN PRODUCTION AREAS AND WORK SPACES IS PROHIBITED.

COMPONENTS AND EQUIPMENT

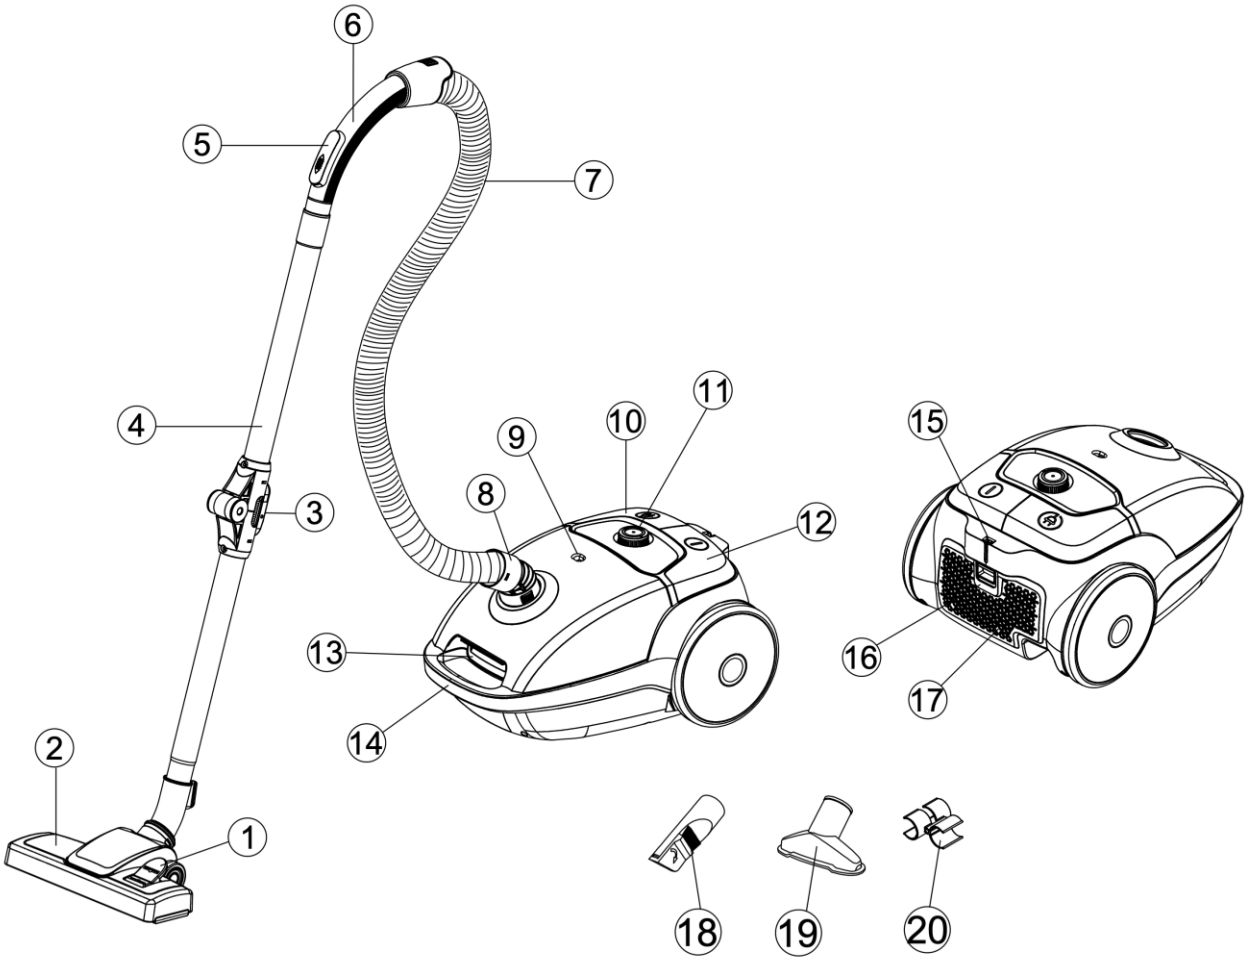


1. «FLOOR/CARPET» mode switch
2. Floor/carpet brush
3. Release button of Foldable tube
4. Bendable tube
5. Manual suction power control
6. Flexible hose handle
7. Flexible hose
8. Flexible hose ending with clamps
9. Dust full indicator
10. Power cord winding button
11. Suction power control knob


12. On/off button
13. Release button for the dust bag compartment
14. Carrying handle
15. Brush storage
16. Grid clamp
17. Outlet HEPA filter grid
18. 2 in 1Crevice nozzle
19. Upholstery brush
20. Attachment holder

Assembling the vacuum cleaner


1. Insert the suction hose in the suction hose port. It must audibly lock into place. To remove the hose, push the two catches on the side of the suction hose and at the same time, pull it out of the suction hose port.

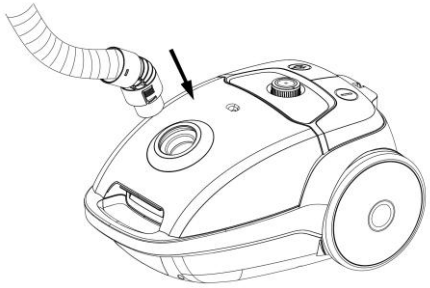


2. insert the bendable extension tube in the handle. for better seating, gently turn the tube back and forth in the process. If you would like to remove the foldable tube at a later time, simply pull it off the handle.

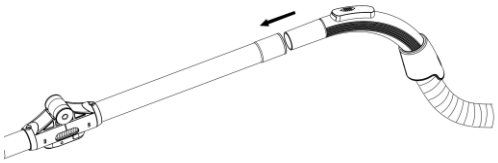

3. Select a suitable nozzle (universal floor nozzle, 2in1 crevice nozzle or upholstery nozzle).

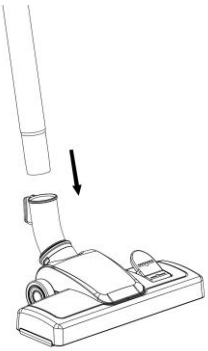


4. Press the button on the folding tube to bend the extension tube, which is suitable for cleaning work in low places.

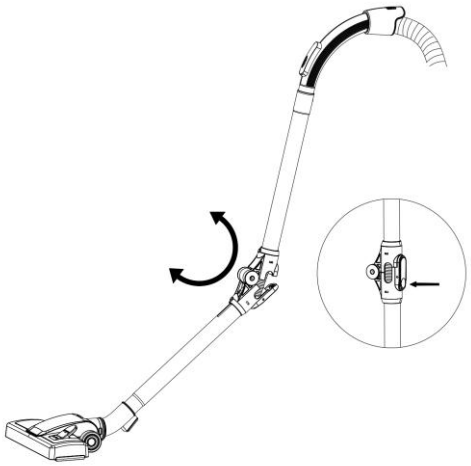

USING OF THE BRUSH ATTACHMENTS

Floor/carpet brush(2)

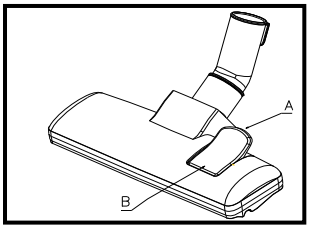

The Floor/carpet floor brush is suitable both for carpets and smooth floors. Using the foot switch you can switch between carpet and smooth floors. A brush on the bottom side is deployed for smooth floors.

2 in 1Crevice nozzle (18)

This attachment can be used either as a dusting brush or as a crevice nozzle.
To switch between the two, adjust the brush to the desired position.

Upholstery brush(19)

The cushion nozzle is suitable for cleaning cushions of all kinds,
e.g. sofas, car seats etc.

Attachment holder (20)

Install the holder on the telescopic pipe and install the attachments and on it.

Using the vacuum cleaner

Safety measures

- Do not use the vacuum cleaner near hot surfaces, such as ashtrays and in places where inflammable liquids are stored.
- Take sharp objects away from the floor before cleaning to prevent unit damage.
- If the suction power of the vacuum cleaner decreases rapidly while cleaning, switch it off immediately and check the telescopic pipe or the flexible hose for obstruction. Switch the vacuum cleaner off, unplug it, remove the obstruction and only after that you can continue cleaning.

OPERATION

Attention! Only turn the device on once you have ensured that all parts have been completely mounted and the dust bag and dust filter have been correctly inserted. Never use the device if the dust bag has not been inserted or without the filters.

- Before using the unit, unwind the power cord to the required length and insert the power plug into the mains socket. The yellow mark on the power cord indicates the maximum cord length. Do not unwind the power cord further than the red mark.
- Press the ON/OFF button to switch the vacuum cleaner on.
- During the operation you can control the suction power using the manual suction power control on the flexible hose handle or rotate the suction control regulator on unit.
- During breaks between cleaning insert the brush into the vertical brush storage .
- After room cleaning switch the vacuum cleaner off by pressing the ON/OFF button and unplug the unit.
- To wind the power cord, press the power cord winding button, hold the winding cord with your hand to avoid its whipping and damage.
- Carry the vacuum cleaner by the handle .


Changing the dust bag and cleaning the motor filter

Caution:


Never operate the vacuum cleaner without the dust bag or motor filter, otherwise the device could be damaged.

Changing the dust bag

If the vacuum's suction is reduced, this may be because the bag needs changing. Raise the floor nozzle off the floor, set the suction force regulation to MAX, switch on vacuum cleaner using the on/off button, and keep an eye on the bag change indicator. If it is red, the bag must be changed.

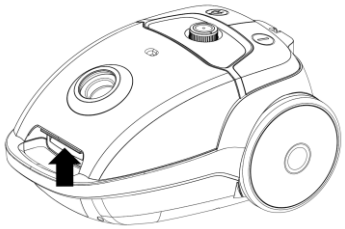

1. Turn off and unplug cleaner.
2. Remove the hose, push the release button to open the dust bag compartment and at the same time, fold the cover open

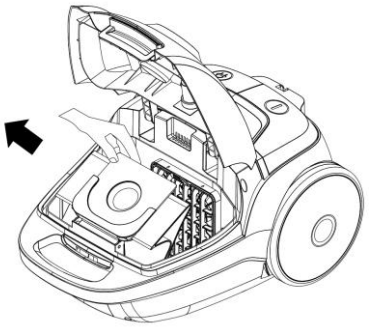

3. Pull the dust bag out of the bracket and empty it.
4. Re-install the dust bag in the vacuum cleaner.
   The vacuum cleaner must never be used without a dust bag.

Note: The bag can be replaced with a disposable paper bag, which is available at our authorized service centers.


CLEANING THE FILTERS

To ensure the best performance of your appliance, it is important to regularly clean the filters, empty the dust bag and check for blockages.

We recommend washing the filters at least once a month and replacing them once a year (You can get them at our authorized services). Filters may need more frequent cleaning and replacement, depending on how often the device is used.


Provide that the motor filter and the outlet HEPA filter are always clean, because the overall performance of the vacuum cleaner depends on it.

Cleaning the motor filter

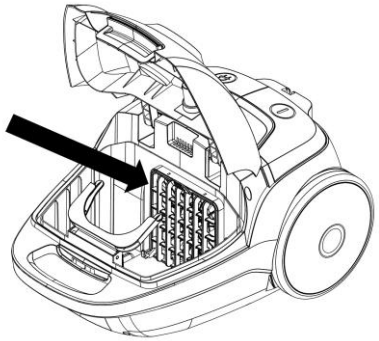

1. The motor filter is located in the dust bag compartment (see arrow).
2. Pull the motor filter bracket up and out and remove the fleece filter.
3. Beat the motor filter out and if necessary, clean it with luke-warm water and a mild cleaner. ATTENTION: Do not in any case clean the filter in the washing machine or dish-washer! Then pour out any leftover water and let the filter air dry completely.
4. Only place the motor filter back in the motor filter bracket once it has dried completely!
5. Put the motor filter bracket back in the dust bag compartment. Make sure that you insert the motor filter bracket so that it is correctly in place. The small handle on the motor filter bracket must be facing up once it is inserted.
6. Close the dust bag compartment by folding the cover shut. It must audibly lock into place.

Cleaning the exhaust air filter

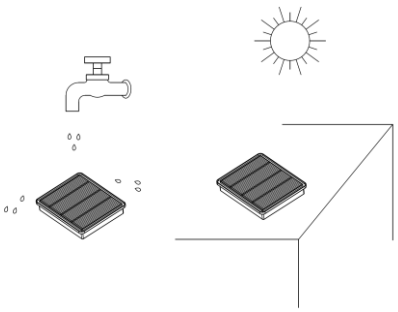

1. Turn off the vacuum cleaner and unplug it from the mains.
2. Press on the grid lock and remove it. Remove the HEPA filter. Wash the HEPA filter under slightly warm water jet. Do not wash the HEPA filter in a dishwashing machine.
3. Dry the HEPA filter. Do not dry the HEPA filter with a hairdryer.
4. Install the HEPA filter back to its place. Install the grid back to its place until the lock clicking.

Note: before installing the HEPA filter make sure that it is clean and dry.

Cleaning the housing

If needed, clean the housing with a damp, soft cloth.

Cleaning the universal floor nozzle, cushion nozzle and tile and brush nozzle

Regularly remove hair and lint from the nozzles; if necessary, use a soft, damp cloth to clean the nozzles.

Transport and Storage

1. You can lift and carry the vacuum cleaner using the carrying handle. Never pull or lift the vacuum cleaner by the cord.
2. Before putting the vacuum away, rewind the cord. Switch off the socket, unplug, and press the cord rewind button until the cord is fully rewound.
3. To save space, the vacuum can be stored upright on its end cover. The telescopic tube can be hung on the vacuum cleaner by inserting the parking fixture into the vertical parking holder.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving form inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

For compliance with EU regulation 666/2013 the appliance is tested according the following methods for measurement and calculation: EN 60312-1:2017/A11:2022 and EN 60704-2-1:2020.